

Unoisetion Caviation Smart 3D RF Vacuum 160mw lipo laser Slimming Machine

Model: YH-5504S



MYOHWAY®

Chapter 1: Safety Warnings

I. Electricity & Machinery Safety

1. The machine is either 110V or 220V. So please check the machine voltage before starting the machine.
2. Please keep the voltage at stable condition.

II. Contraindication Safety

1. People with heart disease, high blood pressure, or configured cardiac Pacemaker.
2. People with acute inflammation, asthma, deep vein thrombosis, thyroncus, cancer.
3. People with hemorrhagic diseases, trauma or who is bleeding.
4. Pregnant women
5. Medical plastic artificial or metal parts inside the body such as metal teeth or silicone breast implants.
6. People with abnormal immune system.
7. People with numb or insensitive to heat.
8. If you are feeling unwell, Prohibited in the ears, nose, eye throat and do not use this device in advance and tell your doctor.
9. Children under 12 years old are not allowed.

III. Treatment Safety

1. Treatment Time is less than 30mins/Body Part/Each Treatment.
2. The energy setting is from low to high gradually which should be subject to skin comfortableness for different people.
3. The patient had better wear the protective eye glasses.
4. If you cannot tolerant heat or uncomfortable, please stop the treatment in advance and turn to your doctor for help.

Chapter 2: Installment and Use

I. Working Condition

Using at normal temperatures and pressure. Please do not stay in too cold, too hot, too dry and too wet.

II. Technical Parameters

Power supply Input:100V-240V

Power :180W

Unoisetion Probe:

Power supply output:150V

Frequency:40KHz

Power:25W

Sextupolar Vacuum 3D SMART RF for body

Power supply output:66V

Frequeuncy:3MHz

Power:30W

Octupole 3D SMART RF for body

Power supply output:66V

Frequeuncy:3MHz

Power:30W

Quadrupole 3D SMART RF head for Arm/face/small area of body

Power supply output:66V

Frequeuncy:3MHz

Power:30W

Bipolar 3D SMART RF for face and eyes

Power supply output:66V

Frequeuncy:3MHz

Power:30W

Red Wavelength:650 - 730 nm

Lipo laser

Laser Diode Wave Length: 635-650nm

Maximum Output Power: 150W

Single Diode Output: 160 mw

64 Diodes Total Max. Output: $64 \times 160\text{mw} = 10240\text{ mw}$

Numbers of Treatment Pad: 8 Pieces (6 Pieces large pads + 2 Pieces small pads)

Numbers of Diodes: Total 64 Diodes (60 Large Diodes +4 Small Diodes)

Timer: 30 minutes adjustable

 
IV. How to install the Accessories?



 
1. A, B, C, D, E are for Vacuum, Cavitation, Octupole RF, Quadrupole RF, Bipolar RF.
2. 1, 2, 3, 4, 5, 6, 7, 8 are for 8 pads.
3. Plug in the power supply..

V. Program Setting

1. Use the red power button to start the machine, the screen will show “Welcome”.

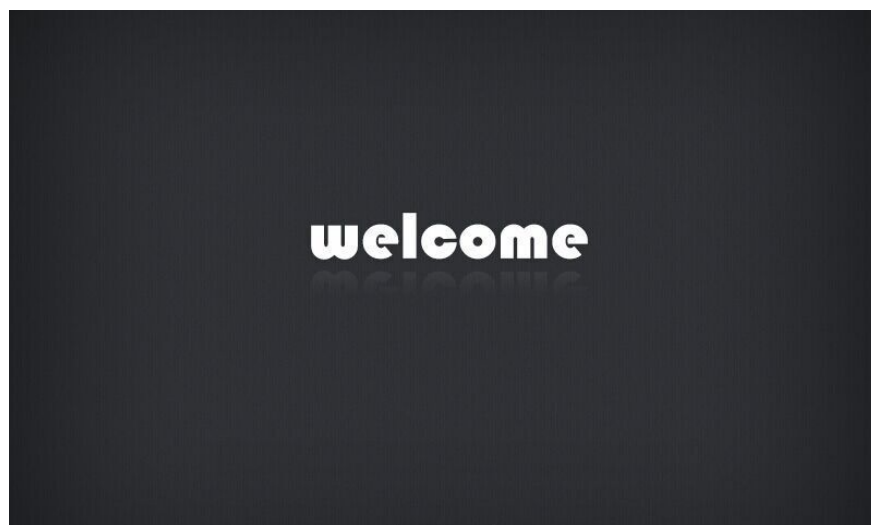

2. Click any place of the screen to enter into the main interface.

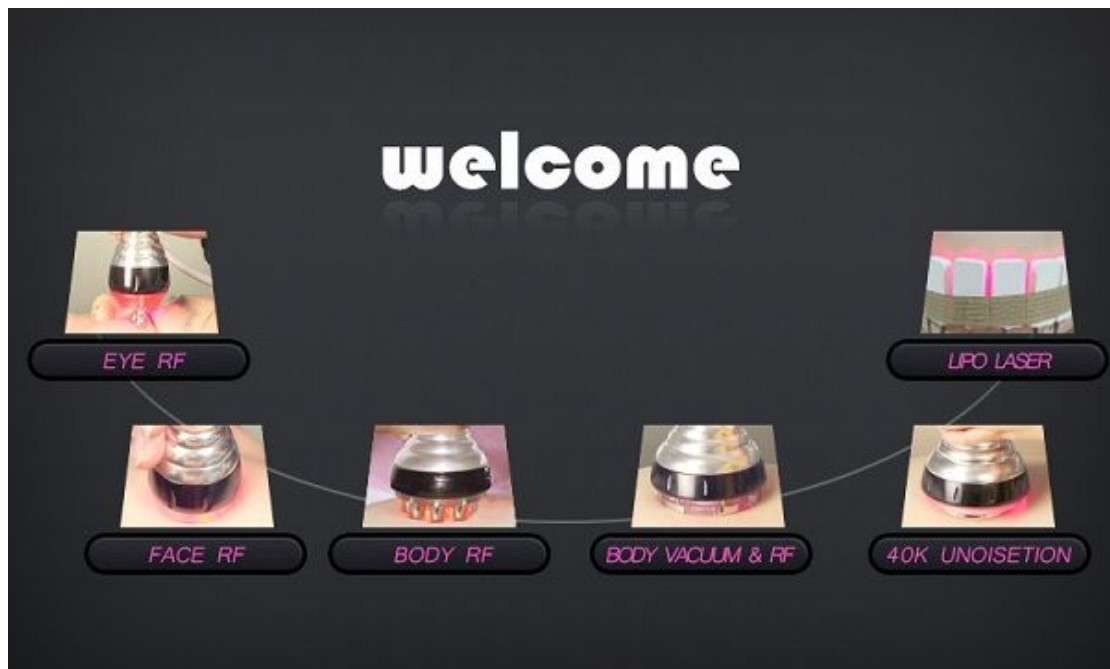 


A. 40K Cavitation



1. Press  button to enter into 40k unoisetion function display as bellow:




2. Please click  to set working time.

3. Please click  to increase or decrease the ENERGY

 
4. Please click  and  to chose working model.

5. Please click  to start or pause function.

 
6. Please click  to come back to the main function interface.

 
B. Body Vacuum & RF



1 Press  button to enter into Body RF Vacuum operation display as bellow:



2. Please click  to set working time.


3. Please click  to increase or decrease the RF ENERGY.

4. Please click  and  to set the time for the

suction and release.

5. Please click  M1, M2, M3, M4 to choose the model.

 
6. Please click  to start or pause function.

 
7. Please click  to come back to the main function interface.


C. BODY RF

1. Press  button then login BODY RF operation display as bellow:




2. Please click  to set working time.

3. Please click  to increase or decrease the RF ENERGY.

4. Please click  to control the led light on the head.

 
5. Please click  to start or pause function.

6. Please click  to come back to the main function interface.

D. Face RF


1. Press  button then login Face Radio Frequency operation display

 


2. Please click  to set working time.

 
3. Please click  to increase or decrease the ENERGY.

 
4. Please click  to start or pause function.

5. Please click  to control the led light on the head.

 
6. Please click  to come back to the main function interface.

 
E. Eye Radio Frequency

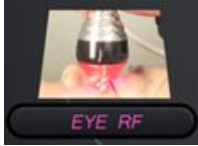 


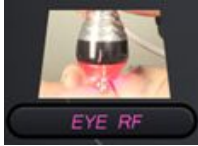1. Press  button then login Eye Radio Frequency operation display.




2. Please click  to set working time.



 
3. Please click  to increase or decrease the RF ENERGY.

 


4. Please click  to control the led light on the head.



5. Please click  to start or pause function.



6. Please click  to come back to the main function interface.

F. Lipo Laser



1. Press **LIPO LASER** button to enter into Lipo Laser operation display as bellow.



2. Click “M1”, “M2 ” or “M3” to choose different treating modes. M1, M2, M3 (ps: Mode 1, Mode 2, Mode 3 means different wave modes). M1 is continuous; M2 is 500ms(2Hz); M3 is 100ms (10Hz).

3. WORKING TIME: click  and  to add or decrease time.

 
4. Click  to start and stop.

5. Click  to clear the energy settings.

6. Click  back to the main menu.

7. Click  to “+” and “-“ the energy.

The laser pads can all working together or work separately as you like.

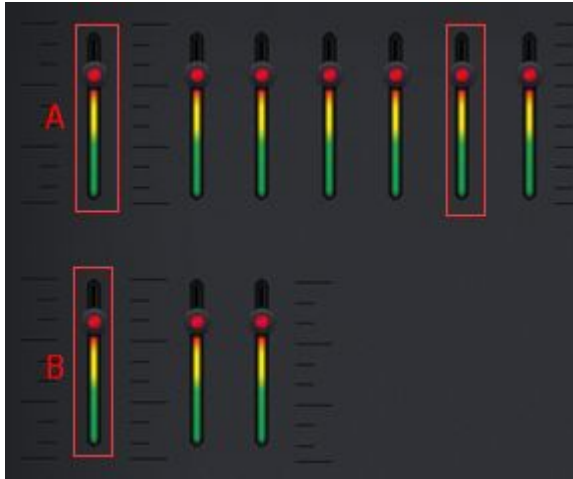

1. Choose A, then all pads of A working together, Choose B, then all pads of B working together.
2. Choose A and B, then all pads can working together.
3. If you choose any single one, then the pad can work separately. And the energy of each one can be adjusted.

About Treatment

1) Abdomen, thigh, buttock, arms slimming

Please clean the skin and then put the ultrasound gel on the treatment area, then turn on the machine, set the time and energy. Please set the energy from low to high to get the best comfortable temperature, then follow this steps:

1. Use the Body RF head 5 mins
2. Use the unoisetion 40k cavitation head 20-25min
3. Use the Body RF Vacuum head 10-15min
4. Use the Body RF head 15~20 min.
5. Use Lipo lasr pads around 25~30 min.

Work time: 2-3 times/ week

2) Face, eyes around, neck skin lifting:

Please clean the skin and then put the rf gel on the treatment area, then turn on the machine , set

the time and energy, pls set the energy from low to high to get the best comfortable temperature,
then follow this steps:

1. Use face radio frequency head for face for 15-20 min
2. Use eye radio frequency head for eye around for 10-15min

 
Work time: 2-3 times/ week

BUTTOCKS

ILLUSTRATION of OPERATION

FACE

Treated time: 30 minutes

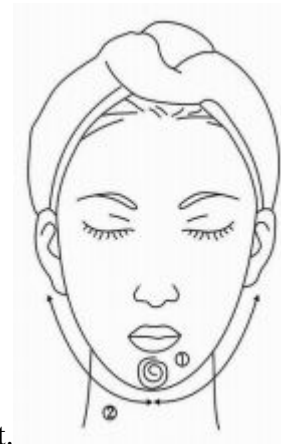

Massage the mandible center in circles to produce deep heat.

2. Massage lower jaw in lines.



3. Massage the triangle zone of both sides of the face in circles.

4. Massage from jaw to angulus oris to ear in lines.

THIGH

Treated time: 30 minutes



1. From down to upper, pushing to the groin to dredge the lymph.
2. From down to upper, circling push by anticlockwise can help decomposing



fatness.



3. Also can push by come-and-go to decompose fatness.
4. Pull from the knee and muscle texture to upper, can improve the curve.

Treated time: 20 to 30 minutes

1. Along the lymph direction, pulling to the waist.



2. From upper to down, by anticlockwise gesture, pull come-and-go.



3. Along the muscle of arm, pull up to lift and tight the muscle.

BACK

Treated time: 20 to 30 minutes



1. First by come-and-go, pushing the bladder nerve 2 to 3 times.



2. Circling by anticlockwise to stimulate the underarm lymph node.

3. On the back, by anticlockwise circling, can help to decompose the



fatness.

4. Using lymph drainage gesture, pull the toxin to the lymph node, can help



improving the back curve.

ARM

Treated time: 30 minutes

BACK SIDE

1. From the inner elbow to the armpit, doing lymph drainage.
2. Circling to stimulate the lymph node.
3. By anticlockwise or come-and-go pushing, decomposing the fatness.
4. From the elbow to the oter, doing tightening gesture.



Facade

1. From the elbow to the oter, doing tightening gesture.

 
Abdomen

Treated time: 20 to 30 minutes

1. From small to large, by clockwise direction, circling around the navel, can help peristalsis of the large intestine.



 
2. From small to large, by anticlockwise direction, circling push down.

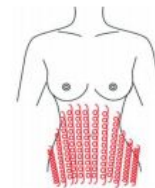

3. From the belly and muscle texture, pull to the groin.



4. Through lymph drainage gesture, taking the toxin to the place of groin.

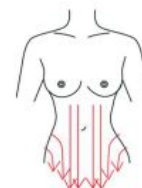

Attention:

1. Pregnant women or women during in menses.

2. Epileptic.
3. Patients with malignancy.
4. Patient whose wound after operation has not healed up.
5. Acute inflammation or epidemical patients.
6. Whom with heart diseases or with heart pacemaker.
7. Who with kidney (gall-stone) disease.
8. Who was embedded metal object or silica gel.
9. Who in menses, birth control period, emiction incontinence period, or accepting the belly operation.
10. Whose body always takes much inner hot.
11. Who has the genetic hypersensitivity.

Notice:

1. Be sure to use the special ultrasonic gel.
2. Avoid knocking the us head.
3. For avoiding burning the head, during operation, please prepare enough ultrasonic gel.
4. Don't stay in one place, avoid treating on the bone.
5. Don't use disinfectant product to disinfect the us head. We suggest the wet cotton or dry towel enough.
6. Check the machine power cord if it is connected well.
7. If the machine will not use for a long time, please switch off it, and power off.
8. Please take off all metal decoration from the operator and patient's body.
9. If continuous using 1 hour, please pause the machine about 10 minutes, then using again.
10. During the operation, be sure not to accept other treatment.